
4 digit display - centre Colan vs 4 DP's

The 4 digit displays are produced by mounting 4 off 7 segment elements on a pcb and potting it in the overall housing we receive.


The internal PCB configures what DP's or Colan are bought out.

They all look the same.

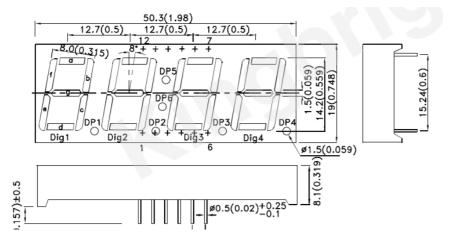

Produced as "Numeric" display.

Pin 3 is wired to each individual DP associated with each of the four digits. (DP 5 & 6 can't be used)

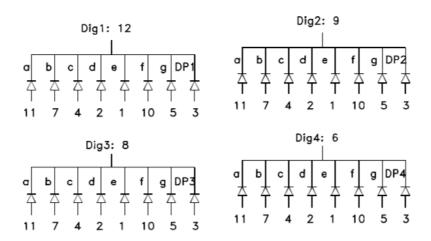

Produced as "Clock" display.

Note: pin 3 is only wired internally to 2 LEDs – the centre COLAN display : No connection to DP 1, 2, 3 or 4!

Internal Circuit Diagram

HDSP-B03E (Common Cathode)

